

## K1200LT Top Case Handle Installation

### Contents of package:

- 1 x K12LT Handle
- 2 x stainless steel screws
- 2 x flat metal washers
- 4 x rubber washers
- 2 x stainless steel finishing washers
- 1 x paper template


### Tools needed other than those found in the BMW toolkit:

- electric drill
- 3/16" drill bit
- Masking tape


### Mounting the Handle:

1. Cut out the BMW roundel and along the bottom edge of the template.
2. Place the template around the roundel on the top case making sure that it is aligned with the bottom edge of the case. Secure along the sides of the template with masking tape.
3. Drill through the template at the marked positions making sure to drill in a straight fore/aft direction and NOT perpendicular to the curved edge of the top case.

WRONG

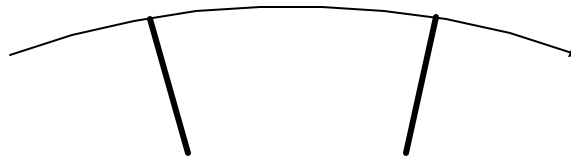

TOP VIEW OF DRILL PATH

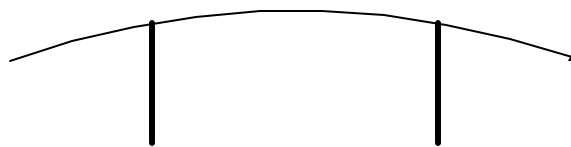

CORRECT

4. Secure the handle using the screws and washers provided. Thread the screw with the flat washer and one rubber washer. Insert into the drilled hole from the inside. Thread on the second rubber washer and finishing washer and screw into the handle.