

## R1200RT – K1600GT FlatBed Luggage Rack Installation

### Contents of Package:

- 4 – 18-8 SS Unthreaded Round Spacer ½" x ¾" Length
- 4 – 18-8 SS M6 x 45 mm Button Head Cap Screws
- 4 – Neoprene SS Sealing Washers ¼" x ¾"
- 4 – M5 Plastic Head Thumb Screws (1 – spare M5 Thumb Screw)  
(For a more permanent fit use the 4 supplied M5 x16mm screws w/ neoprene washers)
- 2 – Hammered Black Mounting Brackets (L & R) 2 piece assembly
- 1 – #4 Hex Key, 1 – #3 Hex Key
- 1 – FlatBed Luggage Rack

**Ensure the motorcycle is placed on the center stand (Please read entire Installation document before proceeding)**

### Remove the Side Cases:



### Remove these M6 Screws:




### Parts for Bracket assembly:



Remove 4 M6 Torx Screws with T30 Torx Driver, two on each side. Discard or save. You will replace with 4 M6 x 45 mm Cap Screws with 4 – 18-8 SS Unthreaded Round Spacers, ½" x ¾" Length.

### Install this screw first:

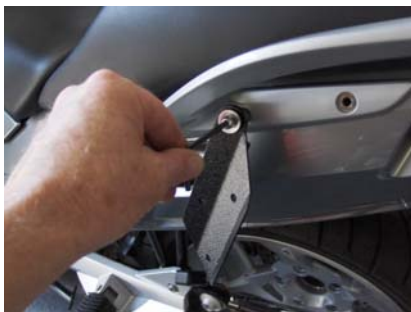

### Install this screw last:



### Tighten Brackets:



Holding left Hammered Black Mounting Bracket, push M6 x 45 screw through hole on rounded end. Slide round spacer over screw and thread screw loosely with #4 Hex Key. Next, repeat for back side of bracket. **Tighten both screws as tight as possible.** Repeat process on right side of motorcycle.

**Bracket Installed:**



**Slide FlatBed between Brackets: Loosely fit thumb screws:**



Place FlatBed over Brackets. Slide FlatBed down between Brackets. Align the 2 threaded nuts with the 2 holes on Bracket. Thread thumb screws **loosely** thru bracket holes and into nuts. Repeat on opposite side. Now you can **tighten all** thumb screws.

**FlatBed has a Hand Hold designed into it to help lift R12-K16 to center stand!**



**FlatBed has two Red reflectors to add extra rear visibility to back of R12-K16!**



**You may now replace L&R Side Cases. Happy travels with your new R1200RT FlatBed!**